

TiVo® Remote Control



1. The **TIVO BUTTON** takes you to the Home screen.
2. If programmed, **TV PWR** turns your TV on or off. Go to 'Menu' > 'Settings' > 'Remote, CableCARD, & Devices' > 'Remote Control Setup' to program.
3. If programmed, use **INPUT** to select the input for your TV.
4. **BACK** goes back to the previous screen.
5. Use the **ARROW BUTTONS** to navigate the TiVo menus. In live TV, press UP for the one-line guide, DOWN to see personalized predictions, LEFT for your favorite channels, and RIGHT to see what's on other tuners.
6. If programmed, **VOLUME** and **MUTE** control the volume on your TV or AV receiver.
7. Press and hold the **VOICE** button to issue voice commands.
8. **REPLAY** repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show. When browsing, press to jump to the first item in a strip.
9. Use the **THUMBS UP** and **THUMBS DOWN** buttons to rate shows to influence which shows get recorded as TiVo Suggestions.
10. The **A, B, C** buttons set options and sort and filter views. Look for on-screen tips.
11. **CLEAR** dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.
12. **LIVE TV** takes you to live TV and lets you cycle through tuners.
13. **INFO** shows the info card while watching a show; press this button again to make it disappear.
14. Press **OK** to choose menu items.
15. Use **EXIT** to close certain apps.
16. Use **CHANNEL UP/DOWN** to change the channel or move quickly through lists and the guide.
17. **GUIDE** takes you to the on-screen program guide.
18. Press **RECORD** to record the show you're watching, or to set up a recording for a show selected in the guide.
19. While watching shows, use these buttons to control playback. Press up to three times for three speeds. In the TiVo menus, use **REWIND** and **FAST-FORWARD** to move quickly through strips.
20. **ADVANCE** moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press to jump to the next tick mark when fast-forwarding or rewinding. Use to enter a dash when tuning to OTA sub-channels.
21. Pressing this button has no effect.
22. Press the **NETFLIX** button to launch the Netflix app.
23. **ENTER/LAST** returns to the last channel viewed.

Availability of third-party content from streaming sources is subject to change, and certain third-party fees may apply.

© 2019 TiVo Corporation. All rights reserved. TiVo and the TiVo logo are registered trademarks. Netflix is a registered trademark of Netflix, Inc. All other company, product and brand names, logos and trademarks are the property of their respective owners.

EPlus Broadband is a division of Jackson Energy Authority. Jackson Energy Authority is an equal opportunity employer.